


Fuse Fail Option

The optional Fuse Fail board allows the user to monitor up to 24 circuit breakers or fuses.

The fuse fail board is connected to the SM range of supervisory modules through an available GPIF input and through which, can be mapped to energize an external alarm.

The fuse fail PCB also has LED's fitted to give a visual indication of failed circuit breaker or fuse.

- Compatible with SM range of supervisory modules.
- Monitor up to 24 circuit breakers.
- LED fail indication.
- Ease of installation.
- Compact design.

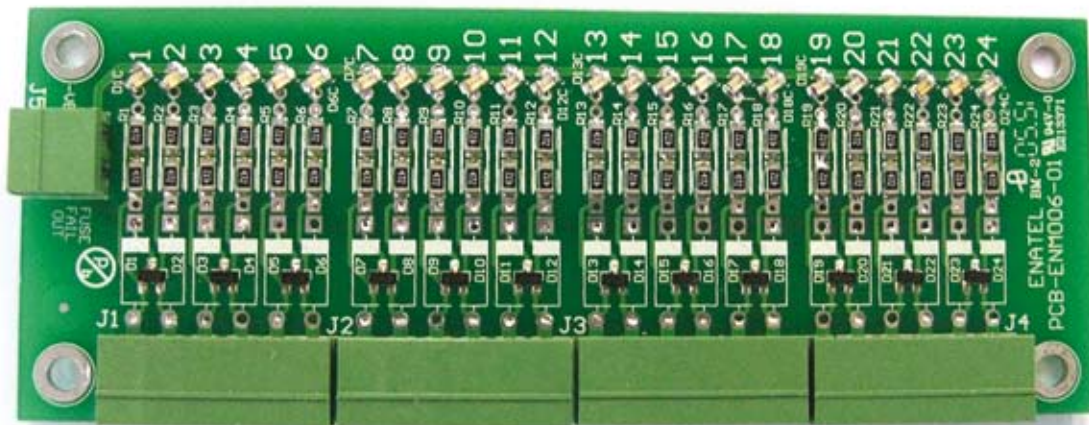

321 Tuam Street
PO Box 22-333
Christchurch
New Zealand
Phone +64-3-366-4550
Fax +64-3-366-0884
Email sales@enatel.net
www.enatel.net



Specifications

Mechanical

Dimensions, W, H, D: 117mm , 12mm, 55mm
Weight: 27g

Part Number
Fuse Fail Option: ASM-FM24